



1. Download the OBDLink app

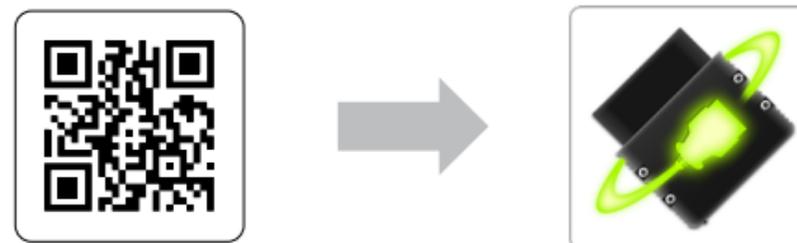


visit [www.obdlink.com/apps](http://www.obdlink.com/apps)  
or scan the QR code

2. Start the engine

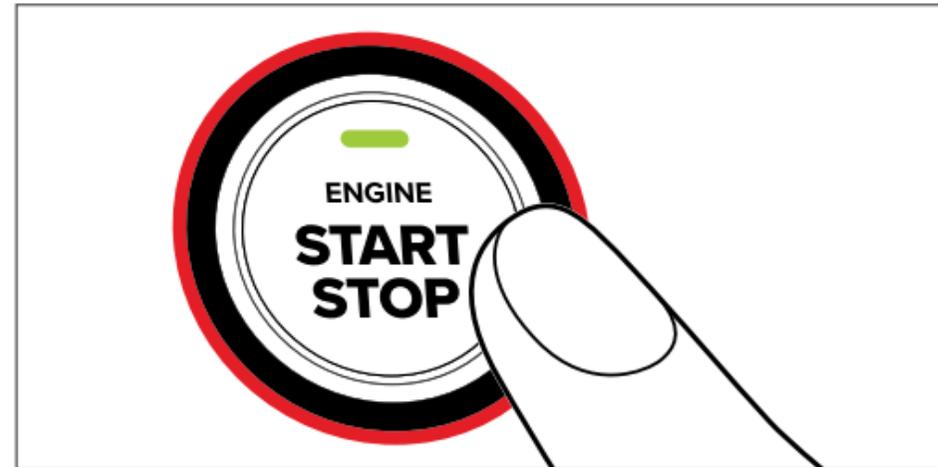


3. Plug LX into the OBD port

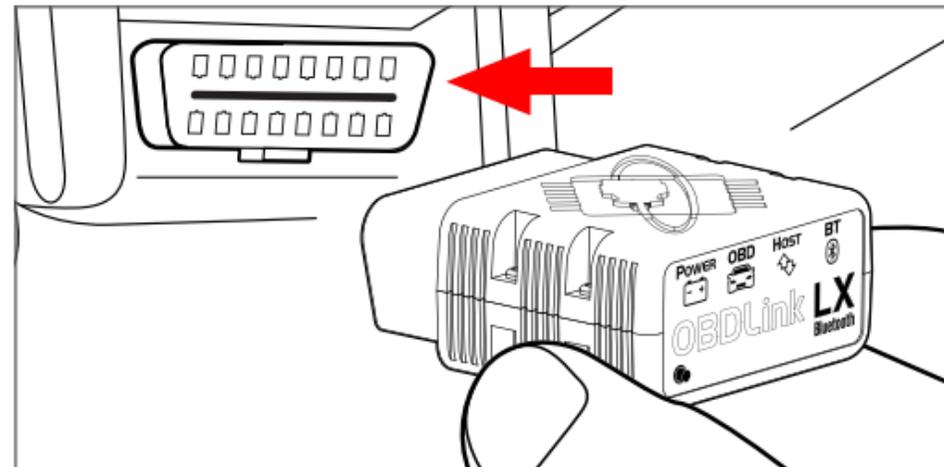


*OBD port is usually in driver's footwell*

4. Push the "Pair" button

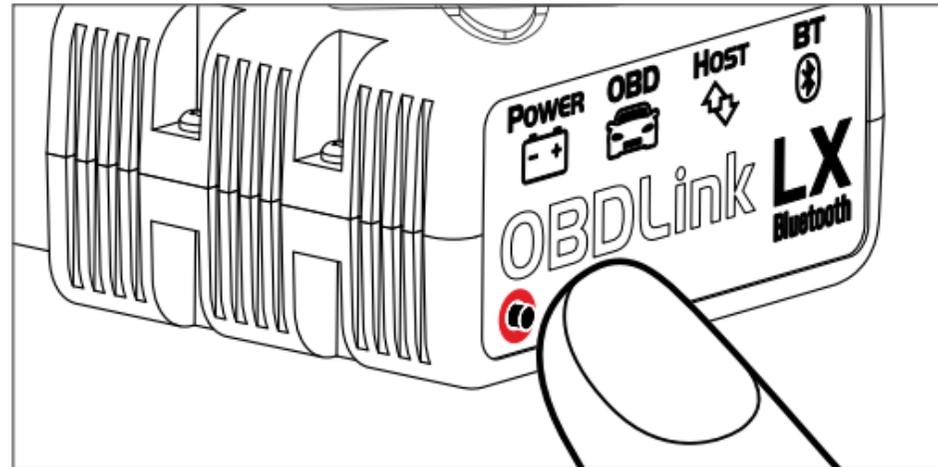


5. Go to Device Settings → Bluetooth and pair with "OBDLink LX"

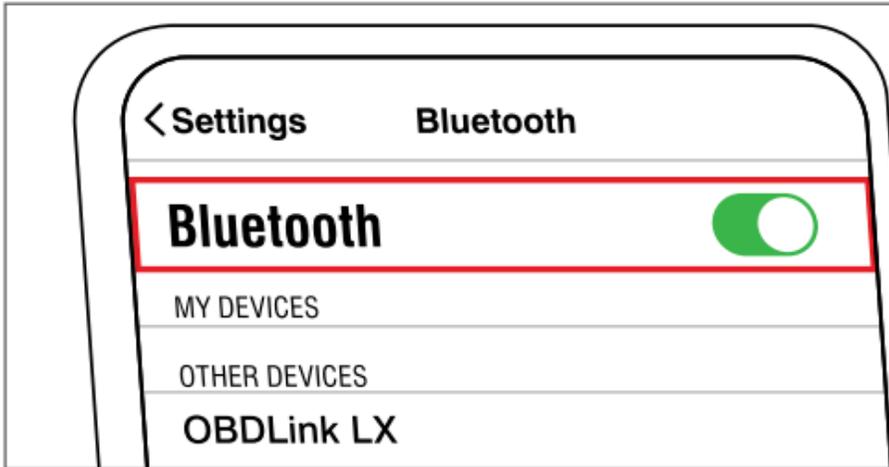


Tap **"Confirm/OK"** when prompted

6. Launch the OBDLink app and tap "Connect"

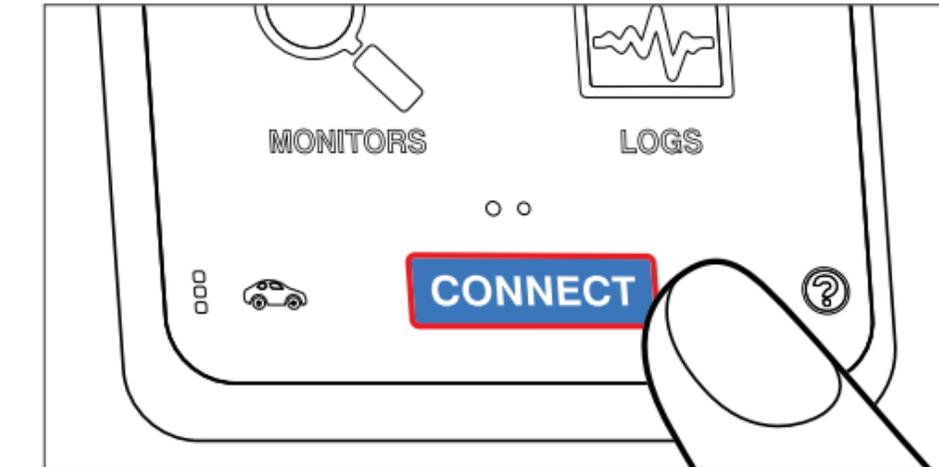


*Continue to step 7*

## 7. Select the “Bluetooth” option in Communication Type

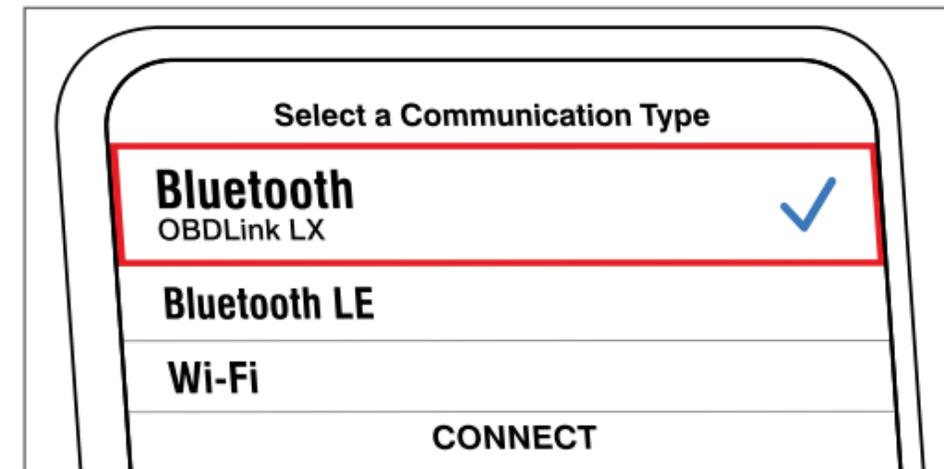

If you don't get this prompt, go to the OBDLink app → Settings → Preferences → Communications

## 8. Allow location services while using app

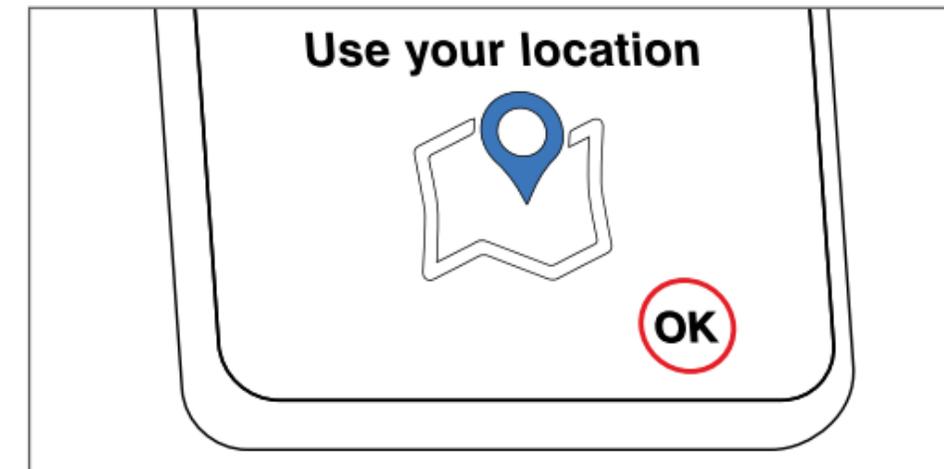

Location data is used to enable the map feature and stays on the device

## Firmware Update

If the firmware update failed:

1. Open the OBDLink app
2. Tap **Settings** → **Firmware Updates**
3. Tap **Menu** (“...” on some devices)
4. Select **Firmware Recovery**, tap **Yes**
5. Make sure your OBDLink device is selected and tap **Update Firmware**
6. Tap the green **Update Firmware** button

You may get a pop-up saying “OBDLink Device Not Found”, this is normal if there are no OBDLink devices registered. Tap “OK”



Do we deserve five stars?  
Share your experience

 [leave an amazon review](#)

 [facebook.com/obdlink](https://facebook.com/obdlink)  
 [twitter.com/obdlink](https://twitter.com/obdlink)




Did we mess up?  
Let our friendly support team make it right

 [obdlink.com/support](https://obdlink.com/support)

 [support@obdlink.com](mailto:support@obdlink.com)

## OBDLink LX Getting Started

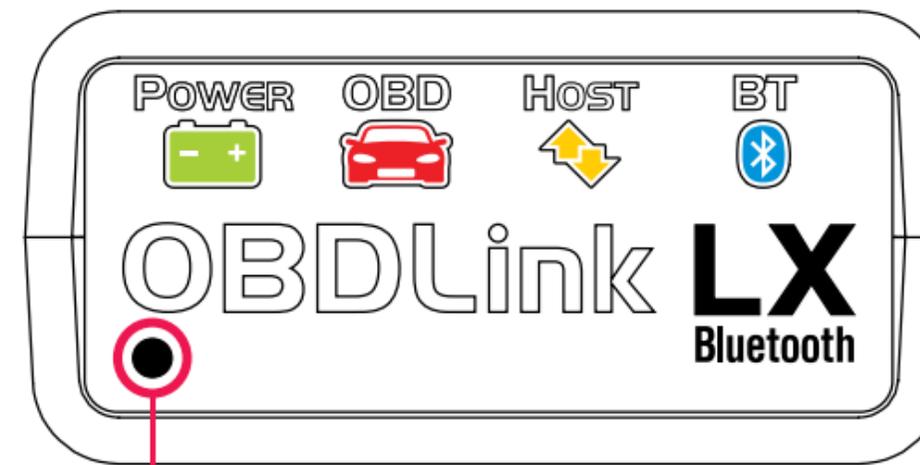

“Pair” button